


Connect the 323 printer with your windows-computer with usb-cable and turn the power on.

Open MemorySaver.



Choose USB and Check Communications.

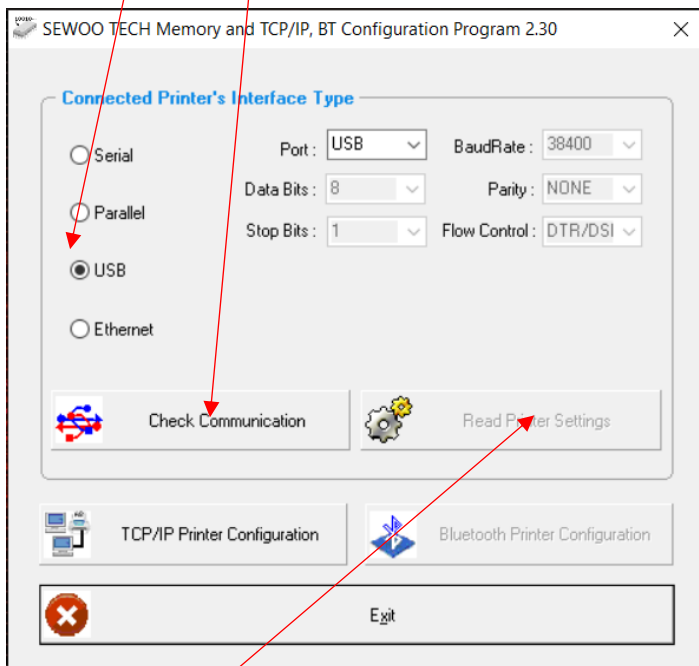

Read Printer Settings (you're able to click it after checking communication)

Choose how long beep you want, save and exit.

